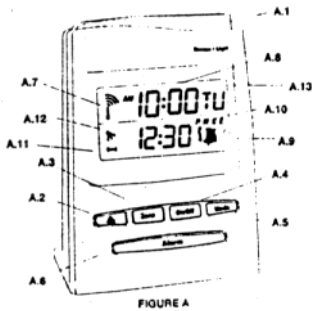


**RADIO CONTROLLED CLOCK
WITH *HiGlo* BACKLIGHT**


Congratulations on your purchase of the first auto-setting always-accurate alarm clock ! We want you to be very happy with this product, but please remember this is a radio wave device and not an perfect science. There are certain areas of the Eastern United States (see map) where urban interference or signals from United Kingdom's radio control tower may distort or delay the time setting signal. Even though these areas may have more difficulty receiving a signal, the **Radio Controlled Clock** contains a very accurate quartz movement and will maintain a precise time even if the radio signal is missed on occasion.

Please also don't hesitate to call (or email helpme@oscientific.com) if you have any question about setting up and/or using your new **Radio Controlled Clock**. In the meantime, all of us at Oregon Scientific hope you enjoy this revolutionary advance in time keeping technology.

Features

- Automatic setting of clock by radio signal from the US atomic Clock
- Time display with Hour, Minutes, Seconds and Date
- Day of the week displayed in one of three languages (English, French or Spanish)
- **Blue HiGlo™ electroluminescent backlight**
- Alarm with eight-minute snooze
- Crescendo Alarm increases in volume and intensity
- Signal Reception Strength indicator
- U.S. Map icon shows user selected time zone
- Automatic adjustment for Daylight Savings time
- Low Battery indicator

Description of Function keys (Figure A)
Snooze/light (Figure A)

Pressing the bar on the top of **The RM116E** activates the HiGlo™ electroluminescent backlight for 5 seconds. When the alarm sounds, pressing this Snooze/Light bar also activates the eight-minute snooze function.

D - Up Arrow keys (Figure A.2)

This key is used for manually setting the time, alarm time or calendar functions. Please refer to the Manual Setting instructions in these instructions for further information.

NOTE : Pressing once advance the setting by increments of 1; holding the ▲ button down for more the three seconds will accelerate the setting to rapid advance mode.

WARNING : The ▲ key also is used to reactivate the signal reception process should it become disable. Please see the Trouble Shooting section for further information.

ZONE (Figure A.3)

CAUTION: Do not press and hold the Zone button for more than three seconds.

Press and release the ZONE button to advance the time zone one step. If you press and hold the ZONE button, it will deactivate the automatic time signal reception. (The tower icon will disappear.) To reactivate the time search, press and hold the + button for three seconds.

Press the ZONE button located on the back of the units until the correct US time zone is indicated on the LCD panel by a darkened section of the US map in the lower right corner of the LCD panel.

To see the time in a different time zone

Press ZONE button located on the back of the unit move one zone at a time until the desired zone is indicated on the display panel. The correct time for that zone will automatically be displayed.

ON/ OFF (Figure A.4)

This button turns the alarm function on and off. Touching the ON / OFF button one time will either turn the alarm on or off. Please refer to the Alarm Setting instructions for further information.

NOTE : When setting the alarm time, the alarm is automatically turn on. If the bell icon [🔔] is visible, the alarm is " on ".

Touching the ON/OFF button one time will either turn the Alarm function on or off.

If you want to stop the daily alarm while leaving the pre-set time for the following days 's wake-up, press the ALARM button. Pressing the ON/ OFF button to stop the wake up alarm will deactivate the alarm function.

MODE (Figure A.5)

Press the MODE key once to switch between the display of either the Day of the Week or Seconds on the clock. RM116E will continue to display the selected function (Day or Seconds) until the MODE button is pressed again.

IMPORTANT : Holding the MODE key for more than three seconds turns on the manual mode for setting the time, date, year and language (English/French/Spanish). Please refer to this section for specific setting instructions.




ALARM (Figure A.6)

Press the ALARM key once to show the alarm time.

The ((Σ)) icon is displayed in the lower left portion of the screen to alert you that the display is showing the time. To return to the month and date display, press the ALARM key once. To set the alarms please refer to the section on setting The Alarm.

NOTE: THE RM116E will continue to display the selected function (Alarm Time or Date) until the ALARM button is pressed again.

Signal Strength Indicator – Figure A.7

Indicators On the Display	Meaning
	Your last signal reception was excellent and time Synchronization with the US Atomic Clock has Taken place.
	Your last signal reception was insufficient and it is Recommended that you reposition or rotate the Antenna.
	The displayed time has been manually set and is not synchronized by the RF signal.
No indicator	Your radio reception is disabled and no signal Reception will be initiated unless it is enabled again

Time Display (Figure A.8)

The top line of the display shows the hours, minutes and seconds (AM /PM) of the clock. Pressing the MODE button once will switch the "Seconds" display to the Day of the Week. RM116E will continue to display the selected function (Day or Seconds) until the MODE button is pressed again.

US MAP (Figure A.9)

This map represents the four optional time-zone setting. The darkened of filled zone block indicates the user selected time zone. **NOTE:** When **RM116E** is receiving a signal from the US Atomic Clock; outline of this map will flash.

Month/ Date (Figure A.10)

The Second line of the display shows the Mouth and the Date. Pressing the ALARM button once will switch the " month and date " to show the "alarm time " The Alarm time is displayed in hours and minutes (AM / PM). **NOTE:** The RM116E will continue to display the selected function (Month /Date or Alarm Time) Until the ALARM button is pressed again.

((•)) Alarm Display indicator (Figure A.11)

This ((•)) icon indicates the second line of the display line of the display is showing Alarm Time.

[🔔] Alarm " ON " Indicator (Figure A.12)

This Bell [🔔] icon indicates that the alarm function is activated.

[BATT] Low Battery Indicator (Figure A.13)

This [BATT] icon indicates that it is time to change batteries. Please refer to the Battery Replacement Section of this manual.

Battery Installation

Your RM116E is shipped with two AAA batteries. These batteries should last for approximately one year depending on the amount of your use of the HiGlo™ backlight. With convenience and practicality of this dramatic backlighting system comes somewhat shorter battery life.

To : activate the unit you must **FIRST REMOVE THE PROTECTIVE BATTERY TABS** which keep the batteries fresh and ready for use during shipment. Simply slide the battery compartment door up and remove this cover to expose the batteries, Remove the two small plastic tabs and **The RM116E** is ready to receive a timekeeping signal.

Please do not become alarmed if the unit does not receive signal directly from the box. The unit will receive most dependable and interference free signal automatically between Midnight and 4 a.m. If you have any questions please give us a call at 800-853-8883 or reach us by email to helpme@oscientific.com.

Radio Controlled Clock:

The RM116E will automatically synchronize current time and date with the signal broadcast by the US Atomic Clock when the product is in reception range of the signal. When the unit is new and just out of the box, synchronization with the U.S. atomic clock can take upto 72 hours. The unit will receive the most dependable and interference free signal automatically between Midnight and 4 AM.

When the unit is receiving radio signal, the reception icon will start to blink. The reception icon will show either strong, weak or no signal depending on the strength of the radio signal. A complete reception generally takes about 2 to 5 minutes.

	- Strong
	- Weak
	- No Reception
	- Receiving

When the reception is completed the reception icon will stop blinking. The reception icon will show [] for no Reception or [] for successful reception.

For best signal reception, place the RM116E away from other equipment that emit RF or microwave signals such as TV's, radios, PC's or microwave ovens. Other causes for signal interference include electrical power transmission towers, steel reinforced concrete construction, and/or metal siding.

You may need to reposition the clock for maximum reception.

Radio Frequency appliances and radios, such as the Radio Controlled Alarm Clock, perform best when placed near a window.

After receiving the initial signal, updates are accomplished with greater ease. Even though there are areas that may have more difficulty in receiving a signal, the RM116E Alarm Clock contains very accurate quartz movement and will retain precise time even if a signal is missed on a rare occasion.

SETTING THE ALARM

- 1) Press and hold the ALARM button for at least three seconds. The " Hour " Segment of the alarm time will begin Flashing.
- 2) While the "Hour" segment is flashing press the [D] button to set the desired hour time (please note the AM /PM designation).
- 3) When the desired hour time is reached, press the ALARM button again.
- 4) The " Minutes " segment of the alarm time will begin flashing.
- 5) While the " Minutes " segment is flashing press the [D] button to set the desired minute time.
- 6) When the desired minute time is reached press the ALARM button again to exit the alarm time set mode.

NOTE: As soon as any change in the alarm time is made the alarm icon ((•)) will automatically appear indicating that the alarm is activated.

IMPORTANT: RM116E will continue to display the "ALARM " time until the alarm button is pressed once to return to the " Month/Date " display.

TURNING THE ALARM ON OR OFF

To turn the alarm on or off simply press the ON/ OFF key in any mode. When the ON /OFF button is pressed once the alarm is activated (the bell icon [] will appear on the display). The alarm is deactivated when the ON/OFF button is pressed once and the bell icon [] disappears from the display.

When the crescendo alarm sounds, it may be turned off using one of the following methods.

If the SNOOZE /LIGHT key is pressed within two minutes the Snooze is activated and the alarm will sound again in 8 minutes.

If the ALARM key is pressed, the alarm will not sound again until the next day.

If the ON/ OFF key is pressed, the alarm is deactivated and will not sound again until it is activated

IMPORTANT: If none of the above actions are taken, the alarm will automatically snooze once, sound again in 8 minutes, and will not sound again until the next day.

MANUALLY SETTING THE TIME AND DATE

IMPORTANT: It is highly unlikely that you should ever need or want to set these features manually; however, in the event that you should travel outside the United States and want this capability, we include these instructions. As soon as any manual setting changes are made, the display will indicate a loss of signal strength (see SIGNAL STRENGTH INDICATOR) to indicate that the clock is now running on manual setting instead of signals received from the Atomic Clock. It is very unlikely that your unit will receive the time and date signal in this mode. To reactivate the atomic signal press the reset buttons on the rear of the unit or removes and reinsert the batteries.

Setting the Time

Press and hold MODE button until the hour segment of the time flashes

Press D button until the desired hour appears on the LCD panel

NOTE: Be sure to check the AM or PM symbol for accuracy

- Press MODE button again until the minute segment of the time flashes

- Press MODE button five more times to exit setting mode

Setting the year

Press hold MODE button until the hour segment of the time display flashes

Press Mode button Twice more until you see a year appear on the display

Press D button until the desired year appears on the display

Press MODE button four more times to exit the set mode and resume normal time keeping.

Setting the Month

Press and hold MODE button until the hour segment of the time display flashes.

Press MODE button three more times until you see the month digit flash on the display.

Press D button until the desired month appears on the display

Press Mode button three more times to exit the set mode and resume normal time keeping.

Setting the Date

Press and hold MODE button until the hour segment of the time display flashes

Press MODE button four more times until you see the date flash on the display.

Press Dbutton until the desired date appears on the display.

Press MODE button two more times to exit the set mode and resume normal time keeping

IMPORTANT: As soon as any manual setting changes are made, the display will indicate a loss of signal strength (see SIGNAL STRENGTH INDICATOR) to indicate that the clock is now running on manual settings instead of signals received from the Atomic Clock.

Setting Language

Press and hold MODE button until the hour segment of the time display flashes.

Press MODE button five more times until you see a single letter (E, For S) appear on the display next to the time.

Press D button until the desired language indicator appears on the display (E for English, F for French and S for Spanish).

Press MODE button one more time to exit the set mode and resume normal time keeping

TROUBLE SHOOTING

Problem	Remedy
No Display	<ul style="list-style-type: none"> • Check battery compartment. • Confirm that batteries are of good quality, and are installed correctly • Be certain the plastic protective tabs have been removed
Did not receive A time signal	<ul style="list-style-type: none"> • If the units are new and just out of the box, allow 60- 72 hours cycle for the clock to automatically seek a signal between midnight and 4 a.m. • May be caused by too much interference. Relocate the clock or the antenna to position near a window. • Be certain the antenna cord is fully extended and look for low battery indicator.
Loss of Signal	<ul style="list-style-type: none"> • May be caused by interference. • If the problem persists, move the clock or antenna to a new location. The RM116E is equipped with a high quality clock mechanism, which insures accuracy between signals.
Other Problems	<ul style="list-style-type: none"> • Call Oregon Scientific at 541-868-8205 or through the internet at helpme@oscientific.com

Technical Data

- Integrated radio receiver for reception of time signal 20kW transmitter WWVB: at 60kHz
- Operating temperature: 35-120 ° F
- Typical operating time on one battery set is up to one year, subject to back-light usage
- Setting time with interference-free reception: 3-7 minutes
- Automatic signal-reception activation: six times every 24 hours
- HiGlo™ backlighting source: Electroluminescence
- Battery type: 2AAA(included)

CUSTOMER ASSISTANCE

Should you require assistance regarding this product and its operation, please contact our customer care department at 541-868-8205 or via email at helpme@oscientific.com.

WARRANTY

This product is warranted to be free of manufacturing defects for a period of 3 months from date of retail purchase. Defective product should be directed to the place of retail purchase for exchange. Should this not be possible, contact our customer care department for assistance and a return material authorization. No returns may be made without a return authorization. Please retain your retail receipt as you may be asked to provide a copy of it for proof of date purchased.

This warranty does not cover product subjected to abuse, misuse, accidental damage or tampering.

