

VOICE ACTIVATED USB 8GB

SKU: VAUSB8GB



**USER MANUAL
FCC CE**

THANK YOU FOR PURCHASING THE VOICE ACTIVATED USB

Please read this manual before operating the voice activated USB and keep it handy.

This fully functioning flash drive is also a covert device that conceals a hidden microphone. This unit takes quality audio recordings, even while plugged in to charge. The voice activation feature allows you to avoid long hours of silent recording and save battery life. You can also hang it from a lanyard (not included).

This product weighs only half an ounce. It is capable of recording 140 hours of audio with a 15 hour battery life. It supports 8GB of internal storage.

Your purchase should include:

1 x Voice Activated USB 8GB

1 x Instruction Booklet

GET FAMILIAR WITH YOUR VOICE ACTIVATED USB

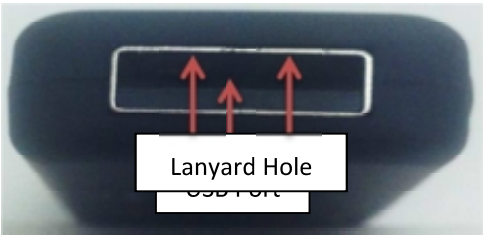 


Figure 1



Figure 2

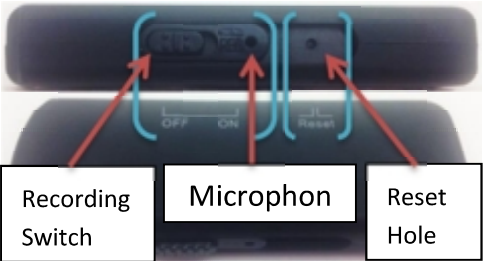 


Figure 3

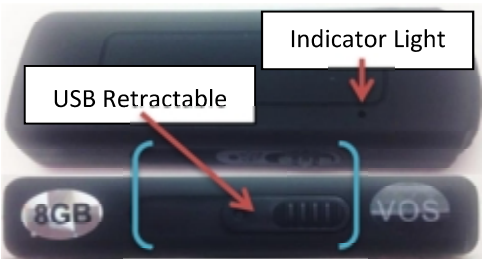 


Figure 4

OPERATING THE [PRODUCT NAME]

IMPORTANT NOTICE: Allow the device to charge 4 – 6 hours before using.

IMPORTANT NOTE: Soft-spoken voices may not record as well as louder voices. We recommend not keeping the device in your bag or pocket while recording. Hanging the device from a lanyard around your neck, belt loop, bag, etc. will produce the best results.

HOW TO CHARGE THE VOICE ACTIVATED USB

1. Make sure the USB port is in the pushed out position.



2. Plug the USB interface into your PC or other compatible device.
 - The red indicator light with blink continuously while charging.
 - When the device is fully charged, the indicator light will be solid.

NOTICE: The indicator light is hard to see. You may need to cup your hand against the device to see the light properly.

HOW TO START AUDIO RECORDING


1. Push the Recording Switch into the ON position.
 - The indicator light will turn blue. This may take a few seconds.
 - The USB is now recording live audio.

*NOTICE: Since the USB is **voice** activated, it will automatically stop recording if the voices are too quiet. When the voices rise in volume, the USB will automatically resume recording.*

HOW TO STOP AUDIO RECORDING

1. Push the Recording Switch into the OFF position.
 - The indicator light will turn off.
 - The audio file is automatically saved.

HOW TO SET THE NEW TIME

1. Make sure the USB port is in the pushed out position.
- 
2. Plug the watch into your PC using the USB cable.
 3. Open the “Removable Disk” drive.



 
Or...



4. Open the “SetUDiskTime” folder.



5. (Double) click the “SetUDiskTime(9x)” program.

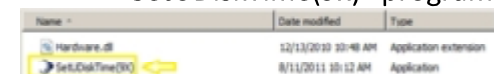

6. The USB will automatically sync to the current time on your computer.

RETRIEVE THE FILES TO YOUR PC

1. Make sure the USB port is in the pushed out position.



2. Plug the watch into your PC using the USB cable.
3. Open the “Removable Disk” drive.



Or...



4. Open the “RECORD” folder.



5. Double click the file you want to view.
 - VLC Player is recommended for watching videos.

TROUBLESHOOTING

THE DEVICE WON'T TURN ON

- Charge the device for at least 5 hours before the first use.
- Make sure the USB port is securely inserted into the power source.

THE DEVICE ISN'T CHARGING

- Press the reset hole with a small pointed object. A paperclip should work.
- Replace the device.

THE RED INDICATOR LIGHT IS FLASHING RAPIDLY WITHOUT BEING PLUGGED IN

- The battery is low.
- Plug the device into a power source to charge.
- The device *can* continue audio recording while charging.

THE DEVICE HAS CRASHED

- Press the reset hole with a small pointed object. A paperclip should work.
- Replace the device.


MY COMPUTER DOESN'T RECOGNIZE THE DEVICE

- Unplug the USB from your PC and reset the USB.
- Unplug the USB from your PC and reboot your PC.
- Try using another USB slot on your PC.

THE SOUND IS UNCLEAR

- Make sure the USB is not in a bag, pocket, or other closed off space while recording.
- Press the reset hole with a small pointed object. A paperclip should work.
- Charge the device.
- Replace the device.

OTHER PROBLEMS

- Call our technical support at 

SPECIFICATIONS

Audio Format	WAV
Audio Quality	128K bps
Recording Time	140 hours
Max. Memory	8GB
Battery Life	15 hours
Player Software	Media player
USB Interface	USB1.1/2.0
Drive Format	Fat 32
Operating System	Windows 2000 Windows XP Windows Vista Windows 7